


Nissan Pathfinder/ Navara; Modell 2010

EU-Pedestrian Protection Bully 76 with horizontal pipe 42 /
EU-Personenschutzbügel 76 mit Querrohr 42



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

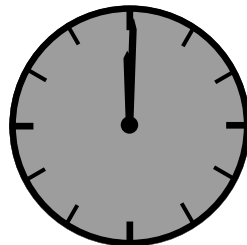

60 Minuten

Artikel-Nr:


127 4613 Stainless Steel
127 5613 Steel black
127 9613 Mounting Set

Revision 1: 10.9.2010

Nissan Pathfinder/ Navara; Modell 2010


EU-Pedestrian Protection Bully 76 with horizontal pipe 42 /
EU-Personenschutzbügel 76 mit Querrohr 42

Required tools / Benötigte Werkzeuge / Outilsage requis / Herramientas necesarias

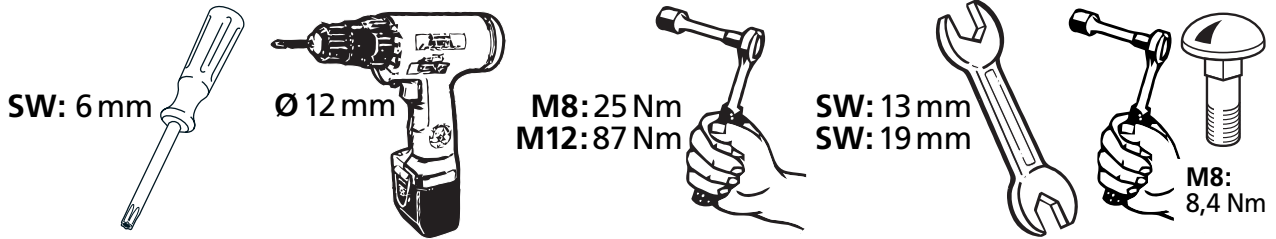

Parts list / Teileliste / Lista de accesorios

1 ø76; 127 4613.1 / 127 5613.1

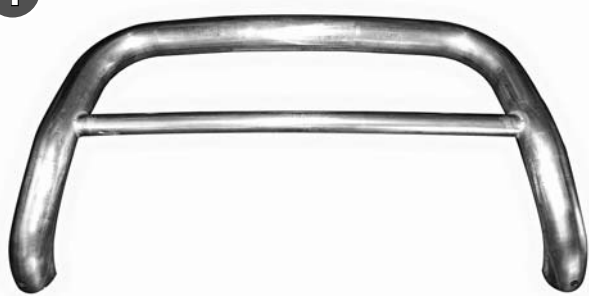

Standard Parts list / Normteileliste

a		M8x20; DIN 933	4x
b		M12x30; DIN 961	2x
c		M8x20; DIN 603	4x
d		M8x20; DIN 912	2x
e		M8; DIN 934	4x
f		ø8; DIN 127	8x
g		ø12; DIN 127	2x
h		ø8,4; DIN 9021	8x
i		ø13; DIN 9021	2x
k		SW 13	8x

Mounting set 127 9613 / Montagesatz 127 9613

2 127 5328R / 127 5329L



3 127 5330R / 127 5331L



4 127 5323

2x



5 M8; 105 5032

2x



Artikel-Nr:

127 4613 Stainless Steel

127 5613 Steel black

127 9613 Mounting Set

Revision 1: 10.9.2010

